



Step 1: Remove the DVR cover and find the chip resistor to reset the hardware (next to the Power Board)

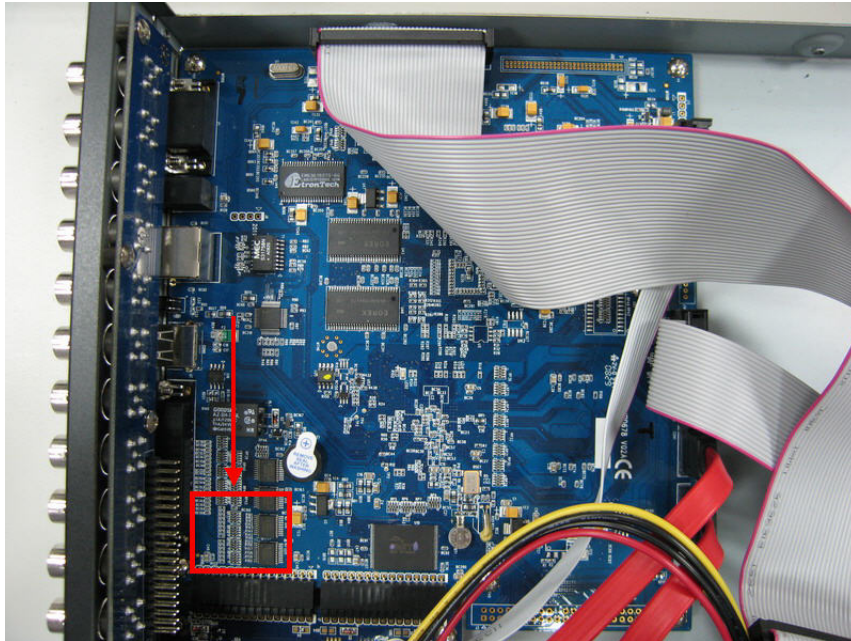

Step 2: The chip resistor is located on R155, as indicated below:

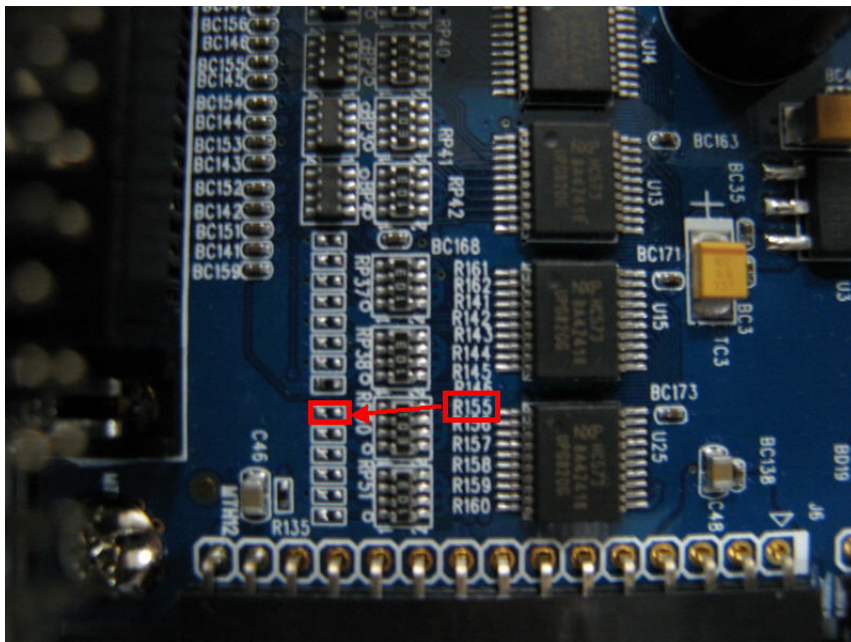

Step 3: Disconnect the DVR power. Then, make the chip resistor short-circuited with a conductive object (such as forceps) as indicated below, and re-connect the power. Remove the conductive object when you hear a short beep sound, and wait till the DVR reboots (About 15-20 seconds).

